



## BR100B Instructions

### **This remote is preprogrammed to operate the following brands without setup:**

Most LG, Samsung, RCA, Philips, Vizio, Hisense, Panasonic, and Zenith TVs. If you have one of these brands of TV, simply insert batteries and you're done.

Note: Reprogramming the remote will make it operate only the brand you reprogrammed it for.

### **Reprogramming your Remote:**

1. Manually turn on the TV.
2. Press and hold the SET-UP key until the LED blinks and stays on, now release the button.
3. Enter the 3-digit code from the code table. After entering the code, the indicator light will turn off, indicating completion.

Note: If the LED blinks rapidly after entering the code, you may have entered an invalid code. Double-check the code list and try again. If volume and channel functions don't work, try another code.

### **Important: If your TV code is not listed or the TV doesn't respond, try using code search:**

1. Turn on the TV.
2. Press and hold the SET-UP key until the LED blinks and stays on, then release the button.
3. Press the channel up button slowly and repeatedly (can take 60 or more times) until the channel changes.
4. Press ENTER to lock in the code.

Note: If you pass the code, press the CH- key to go backward through the library until the TV changes channels again, then press ENTER to lock in the code. You can identify the code for future use with the following step.

### **Code Identification:**

1. Turn on the TV.
2. Press and hold the SET-UP key until the LED blinks and stays on.
3. Press the SET-UP key again and release.
4. Slowly press each number key from 0 to 9. When the LED blinks, that is the first digit of your code. Repeat step 4 to find the next digit and repeat once more for the third digit.

**Sleep mode:** This remote has an internal timer, so it can work even if your TV doesn't have a sleep feature.

1. Turn on the TV.
2. Press Sleep. If the Sleep Timer message appears on the TV screen, select the desired time by repeatedly pressing the Sleep key. You're done.

Note: If no display is observed on the TV after pressing Sleep, follow steps 3-5.

3. Press and hold the Sleep key until the LED blinks and stays on, then release the key.
4. Choose a time between 0 and 99 minutes (two-digit number). The LED will blink and remain off. The timer is now set.  
Important: The remote must be pointed towards the TV so it can send the signal to shut off the TV when the time elapses. Ensure that there are no obstructions blocking the signal, or it won't work.
5. To deactivate sleep mode, either press the power key or press and hold the sleep key.

### **To return to Factory Setting:**

1. Press and hold SETUP until the LED stays on.
2. Press CC.



## BR100B Codes

TV Brand	Codes
Advent	911, 932, 933, 614, 303, 201, 301, 909, 919, 920, 934, 082, 109
Aiko	900
Akai	601, 903, 922, 027, 038, 039, 041, 117
AOC	079, 601, 617, 103, 076, 077, 078, 080, 156
AOMNI	161
Apex	000, 618, 604, 140, 155
Ascoli	237
Aspect	606
Audiovox	100, 901, 900, 101, 015, 016, 133
Belcor	617
Bell&Howell	620, 611
Blue Diamond	407
Bradford	901
Brockwood	617
Broksonic	902, 614
Candle	601, 619
Celebrity	605
Celera	092, 094
Changhong	618
Citizen	903, 601, 619, 900, 614
Clairtone	103
Coby	135, 136, 151
Concerto	619
Contex	901, 103, 234
Craig	901
Crosley	303, 301
Crown	901
Curtis/Curtis Mathes	400, 301, 620, 100, 500, 232, 231, 903, 044, 621, 606, 619, 611, 603, 102, 153, 127, 168, 169, 170, 171, 172, 173, 174, 175, 930
CXC	901
Daewoo	100, 617, 900, 101
Daytron	617
Dumont	700, 617
Durabrand	902, 901, 201, 614, 615, 914, 918
Dynex	614, 085, 086, 109, 110, 112, 620, 903, 619, 910
Electric Mirror	225
Electroband	605, 103
Electrohome	614
Element	112, 160, 113, 114, 115, 116, 152
Emerson	620, 902, 022, 614, 901, 200, 201, 607, 617, 615, 602, 103, 101, 930, 903, 112
Envision	079, 601, 076, 077, 078, 080
ESA	901, 201, 601, 903
Fisher	620, 801
Fujitsu	615, 300
Funai	901, 615, 022, 201
Futuretec	901
GE	400, 202, 100, 200, 607, 608, 802, 042
GFM	201, 022, 133
Gibraltar	700, 601, 617
Global Vue	125, 126
GoldStar	601, 607, 617, 619
Grundig	901, 615
Haier	914, 918, 043, 045, 092, 093, 094, 095, 096, 097, 130, 131, 127, 122, 626
Hallmark	607
Hannspree	080, 627
Harvard	901
HCI	020 (bed 1), 021 (bed 2)
Hisense	112, 614, 902, 138
Hitachi	606, 619, 611, 005, 238, 916, 060, 150
HP	075

ILO	921, 925, 609, 201, 059
Infinity	301
Infocus	400
Inteq	700
Insignia	084, 614, 112, 303, 201, 301, 909, 919, 920, 934, 081, 082, 083, 085, 086, 108, 109, 110, 111, 117, 620, 903, 619, 910, 930
Iris	250
JBL	301, 000, 604, 618
JCB	605
JC Penny	400, 609, 202, 903, 601, 607, 608, 617, 800
JVC	701, 159, 157, 226
KEC	901
Kenwood	601, 617
KLH	618
KTV	901, 601, 103
Kolin	023, 024, 025, 026
Konka	904, 001, 304, 002, 003, 041, 083, 117
LG	619, 227, 910, 700
Logik	611
Luxman	619
LXI	400, 301, 620, 609, 607
Magnavox	301, 302, 303, 601, 615, 617, 803, 078, 905, 906, 907, 908, 199, 034, 909, 011, 035, 036, 037, 040, 046, 047, 048
Majestic	611
Marantz	301, 601
Matsushita	004
Megatron	607, 606
MEI	103
Memorex	118, 620, 004, 614, 104, 095, 607, 615, 611, 700, 303, 201, 301, 909, 919, 920, 934, 012
MGA	104, 601, 607, 617, 500
Midland	400, 700, 202
Minutz	608
Misakai	201
Mitsubishi	500, 104, 607, 617, 601
Motorola	500, 802
MTC	903, 601, 617, 619, 103
Multitech	901
NAD	609, 607, 603
NEC	601, 617, 619
Nikko	601, 607, 900
Norcent	078, 079
Noshi	800
NTC	900
Olevia	923, 023, 024, 025, 026, 228
ONN	400
Onwa	901
Optimus	620, 004, 603
Optonica	500, 610
Orion	902, 614, 615, 109
Panasonic	004, 202, 802, 610, 301, 302, 303, 055, 056
PDI	007, 008, 009, 010
Philco	301, 614, 601, 606, 617
Philips	301, 302, 303, 305, 601, 615, 617, 803, 078, 905, 906, 907, 908, 909, 011, 034, 035, 036, 037, 040, 046, 047, 048, 080
Pilot	601, 617
Pioneer	603, 600
Polaroid	400, 910, 913, 915, 229, 917, 920, 012, 013, 028, 029, 030, 031, 032, 033, 041, 083, 084, 109, 113, 117, 128
Portland	617, 900
Prima	085
Prism	202
Proscan	400, 074, 085, 112, 127, 234, 233, 235, 168, 169, 170, 171, 172, 173, 174, 175, 232, 231, 230, 930

Proton	607, 102
Proview	112, 113, 114, 115, 116
Pulsar	700, 617
Quasar	004, 202, 610, 802
RadioShack	400, 620, 610, 901, 621, 607, 617, 619
Realistic	620, 610, 901, 601, 607, 617, 619
RCA	400, 112, 237, 074, 158, 230, 617, 800, 280, 296, 232, 231, 234, 612, 299, 281, 297, 501, 298, 619, 127, 600, 402, 403, 401, 404, 405, 623, 042, 406, 168, 169, 170, 171, 172, 173, 174, 175, 930, 609
Rhapsody	103
Roomconx	614, 615, 902, 924
Roku	084 (Roku TV only – not for Roku stick or player)
Runco	700, 601
Sampo	601
Samsung	930, 903, 601, 607, 617, 619
Sansui	614, 902, 615, 109, 234, 235, 233
Sanyo	620, 801, 931
Sceptre	605
Scotch	607
Scott	902, 901, 607, 617, 615
Sears	400, 301, 620, 609, 607, 615, 622, 801, 201, 402
Seiki	112, 113, 114, 115, 116, 160, 152
Sharp	500, 610, 501, 929
Sharp (LCD)	912, 929, 156
Shogun	617
Signature	611
Simpson	803
Sony	605
Soundesign	901, 607, 615
Soyo	061, 062, 063, 064, 065, 066, 067, 068, 069, 070, 071, 072, 073
Squareview	201
SSS	901, 617
Starlite	901
Superscan	201, 500, 912, 929
Supersonic	234
Supreme	605
Sylvania	301, 601, 022, 201, 901
Symphonic	901, 201, 022
Syntax	023, 024, 025, 026
Tandy	500
Tatung	802
TCL (non-Roku)	400
Technics	004, 202
Techwood	202, 619
Teknika	301, 901, 104, 605, 617, 615, 619, 611, 900
TMK	607, 619, 602
Toshiba	609, 903, 613, 910, 619, 058, 620
Trutech	101, 201, 617, 900, 015, 016, 017
Upstar	176, 177
Venturer	015, 016, 133
Vertex	236
Victor	701
Vidtech	607, 617
Viewsonic	087, 088, 089, 090, 091, 098, 099, 105, 106, 107, 019, 132
Viore	903, 119, 120, 121, 122, 123, 124, 626, 154, 127
Vivitek	058
Vizio	927, 011, 013, 014, 626
Wansa	237
Wards	301, 610, 601, 607, 608, 617, 615, 619, 611
Westinghouse	926, 928, 049, 050, 051, 052, 053, 054, 624, 625, 626, 127, 129, 152
White Westinghouse	614, 101, 605
Yamaha	601, 617
X2-GEN	057
Zenith	700, 614, 611, 900, 619, 910, 215, 216